


Robic M803 Big Game Timer Instructions

THANK YOU for buying the M803 Big Game Timer. Your purchase brings you a versatile, World-Class Timer with two separate timers, perfect for any timed event. In order to ensure that you receive the maximum enjoyment from your Timer, BEFORE USING, PLEASE TAKE A MOMENT TO REVIEW THIS OPERATION GUIDE TO FULLY UNDERSTAND HOW YOUR TIMER WORKS.

Pushbutton Location & Operation

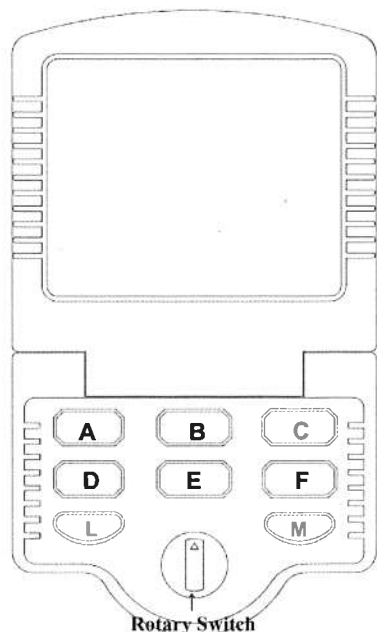

Please refer to this illustration during your review of this instruction booklet. The pushbuttons are identified by letters ("A", "B", "C", "D", "E", "F", "L", "M").



The Robic M803 Big Game Timer offers the following Timing Functions for your use:

- **Dual Time Zone** display shows Time of Day and Calendar in two separate time zones.
- Two distinct **Daily Alarms** can be set for each separate time zone.
- **Dual Display Countdown Timers** (shows time remaining) can be set to operate Simultaneously or Independently for 1 second to 200 hours each.
- **Dual Display Count Up Timers** can be set to operate Simultaneously or Independently

for 1 second to 200 hour each.

- **Programmable Countdown Timer** using easy to operate rotary switch has 26 preset commonly used countdown times.
- Countdown Timer will show Time Remaining in hours, minutes & seconds or as a **Percentage value (%) of Time Remaining**.
- Silent or audible alarm options may be chosen.

How to operate your Robic M803 Big Game Timer

I. Using the Dual Time Zone Function

Press "L" to locate Dual Time Zone Mode. Pressing "L" will change the display between "HOME" time and "LOCAL" time. These are the two time zones. In the "HOME" Time Zone, the time will appear in the top row, the calendar will appear in the bottom row and the "HOME" indicator will appear. In the "LOCAL" Time Zone, the time will appear in the bottom row, the calendar will appear in the top row and the "LOCAL" indicator will appear.

To Set the Time:

Select the time zone to be set by pressing "L". Now press "C". Time Display will appear flashing.

Press "A" to increase hours or "D" to decrease hours.
Press "B" to increase minutes or "E" to decrease minutes.
Press "C" to increase seconds or "F" to decrease seconds.
Press "M" to select AM/PM or 24 Hour time display.

To Set the Calendar:

Press "C". Time will appear flashing. Then press "L". Calendar will appear flashing.
Press "A" to increase year or "D" to decrease year.
Press "B" to increase month or "E" to decrease month.
Press "C" to increase date or "F" to decrease date.

Notes:

1. You may press and hold any pushbutton while setting any function to advance digits rapidly.
2. The M803 will exit the setting sequence if no pushbuttons are pressed within 15 seconds of entering the setting operation.
3. You may exit the setting procedure at any time by pressing "L" twice.

II. Using and Setting the Daily Alarms

Two separate alarm times can be set for each time zone. You may arm (set it to go off) or disarm the alarm at any time. After you have set an alarm time, an alarm will sound for 20 seconds at that time each day.

The setting process for each alarm is identical. Select which alarm you want to use as follows: Select Time Zone (Home or Local) by pressing "L".

Press "F" to display Alarm 1 or Alarm 2. Then press "C". Alarm Time will appear flashing.

Press "A" to increase hours or "D" to decrease hours.

Press "B" to increase minutes or "E" to decrease minutes.

Press "L" twice at any time to exit setting operation.

The Alarm symbol (A1 or A2) will appear to indicate which alarm is disarmed.

Setting the alarm time will automatically arm the alarm. To view the alarm time, press "F". Press "F" again to view the second alarm time. When the alarm sounds, press any pushbutton to silence the alarm.

III. Using the Dual Countdown Timer

Press "M" to locate the Dual Countdown Timer. The Countdown indicator will appear (▼). The Robic M803 can be set to count down from 1 second to 200 hours.



To set the Countdown Timers press "C". Time will appear flashing in the top row (TIMER1).

Press "A" to increase hours or "D" to decrease hours.

Press "B" to increase minutes or "E" to decrease minutes.

Press "C" to increase seconds or "F" to decrease seconds.

You may select to engage two countdown timers simultaneously (SIM) or independently (IND) by pressing "L" while the time appears flashing.

Press "M" to set "TIMER2" in the bottom row and then proceed again as described above.

How to Operate the Dual Countdown Timer:

After the countdown times have been set:

For Independent Operation (IND) – Press "B" to Start & Stop times in the top row and Press "E" to Start & Stop times in the bottom row.

Press "A" to Reset countdown time in the top row and press "D" to Reset countdown time in the bottom row.

You may Start & Stop the countdown timers as often as necessary. The countdown times will Reset only when stopped. While the timer is counting down, the stop indicator (STOP) will disappear.

For Simultaneous Operation (SIM) – Press "B" or "E" (as above) to Start or Stop the countdown times. Press "A" or "D" to restart.

Displaying Time Remaining as a percentage (%) – The M803 will display the percentage of time remaining at any time by pressing "F".

IV. Using the Dual Count Up Timer

Press "M" until the Count Up indicator (▲) appears. The M803 will count up to 200 hours with 1 second resolution.

Start & Stop the timer in the top row (TIMER1) by pressing "B". Press "A" to reset. Start & Stop the timer in the bottom row (TIMER2) by pressing "E". Press "D" to reset.

V. Using the Programmable Countdown Timer

Press "M" until the Programmable Countdown Timer appears (PROG). The Programmable Countdown Timer is set using the "Rotary Switch".

The Preset Time will be displayed in the top row, while the Time Remaining will be displayed in the bottom row.

Rotary Switch I: Preset times 30 seconds to 14 minutes

Rotary Switch II: 15 minutes to 120 minutes in various increments

Select between Rotary Switch I or Rotary Switch II by pressing "C" while timer is reset. Move the "Rotary Switch" to your desired countdown time and begin timing by pressing "B". You may view the time remaining as a percentage (%) of the total time by pressing "F".

You may reset the preset time by pressing "A" or "D" while the timer is stopped.